

# INSTRUCTIONS FOR: CANOPY TENTS

## PRODUCT DESCRIPTION

A canopy is an excellent way to provide shade during outdoor events. A standard 10' x 10' size with telescopic legs, set up is quick, easy, and user-friendly. Comes with a carry bag and a custom dye-sub printed canopy top.

## FEATURES

### DISPLAY DIMENSIONS

- 120" W x 135" H x 120" D

### GRAPHIC MATERIAL

- Dye-Sub Fabric

### GRAPHIC DIMENSIONS

- 120" W x 89" H

### GRAPHIC FINISHING

- Hemmed around sides
- Black or White color trim

### Step 1

Take your frame and slightly expand it to expose the corner bars.



### Step 2

Take your canopy graphic and place it on top of the frame.



 
### Step 3

Adhere each corner of the canopy to each corner of the frame. Inside each corner of the canopy, there is a strip of Hook and Loop sewn to it.



### Step 4

With the canopy securely in position, expand the frame until the corner latches lock into place.

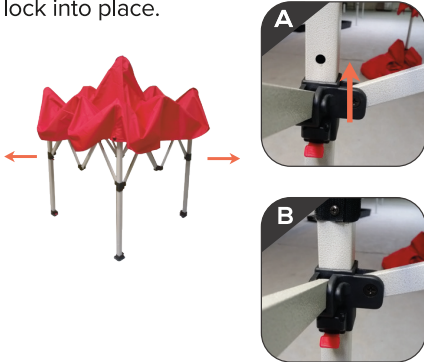


### Step 5

Increase the height by extending the lower legs.



### Step 6

 Pull each leg down until the latch locks into place.

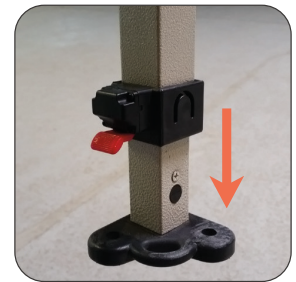

### Step 7

Locate the spindle under the canopy, in the middle of the frame. Pull the lever out and rotate to extend the upper peak pole.



### Step 8

The dome cap will push out the canopy, creating tension to flush out any loose areas.



### Step 9

The install is complete.



Print • Web • Mobile • Office • Shop • Diocesan.com + 877-212-7317

**DIOCESAN**  
Catholic Life Every Day